

The User Guide of POES-102

Step 1 > Connect two new IP Cameras to the PoE ports of NVR

Step 2 > Copy the setting of the 2nd camera from the page of the IP Camera

IP Camera [Close]

IP Address: 192.168.254.4
Protocol: HIKVISION
Management Port: 8000
Channel Port: 1
User Name: admin
Password: *****
Confirm: *****
Transfer Protocol: Auto
Adding Method: Plug-and-Play
IP Camera Time Sync. Enabled

[OK] [Cancel]

Step 3 > Switch the “Adding Method” from “Plug-and-Play” to “Manual”

IP Camera [Close]

IP Address: 192.168.254.4
Protocol: HIKVISION
Management Port: 8000
Channel Port: 1
User Name: admin
Password: *****
Confirm: *****
Transfer Protocol: Auto
Adding Method: Plug-and-Play
IP Camera Time Sync. Enabled

[OK] [Cancel]

IP Camera [Close]

IP Address: 192.168.254.8
Protocol: HIKVISION
Management Port: 8000
Channel Port: 1
User Name: admin
Password: *****
Confirm: *****
Transfer Protocol: Auto
Adding Method: Manual
IP Camera Time Sync. Enabled

[OK] [Cancel]

Step 4 > Paste the setting from the Step 2 into the red arrow fields

IP Camera [Close]

IP Address: 192.168.254.8
Protocol: HIKVISION
Management Port: 8000
Channel Port: 1
User Name: admin
Password: *****
Confirm: *****
Transfer Protocol: Auto
Adding Method: Manual
IP Camera Time Sync. Enabled

[OK] [Cancel]

Step 5 > Remove all two cameras from the PoE ports of the NVR

Step 6 > Connect these two cameras into the PoE1 port and the PoE2 port of the POES-102

Step 7 > Connect the PoE IN port to the first PoE port of the NVR